



# OWNER'S MANUAL

## Searwood 600

## Searwood XL 600



Scan here to access the full online version of this Owner's Guide and:

- Activate your Warranty
- Get Support
- Get Barbecuing Tips and Recipes



## SAFETY

**READ ALL INSTRUCTIONS BEFORE INSTALLING AND USING THE APPLIANCE.** This Owner's Guide contains important product dangers, warnings, and cautions. Please read this entire manual before assembly and use of this pellet fuel-burning appliance. Failure to follow these instructions could result in property damage, bodily injury or even death. Contact local building or fire officials about restrictions and installation inspection requirements in your area. For assembly instructions, refer to the Assembly Guide. **SAVE THESE INSTRUCTIONS.**


Visit [weber.com](http://weber.com), select your country of origin, and register your barbecue today.

**DANGER, WARNING, and CAUTION** statements are used throughout this manual to emphasise critical and important information. The statements are defined as:

- △ **DANGER!** Indicates a hazardous situation which, if not avoided, **will result in death or serious injury.**
- △ **WARNING!** Indicates a hazardous situation which, if not avoided, **could result in death or serious injury.**
- △ **CAUTION!** Indicates a hazardous situation which, if not avoided, **could result in minor or moderate injury.**

- △ **DANGER!** Keep flammable vapours and liquids away from the barbecue. Never use gasoline, gasoline-type lantern fuel, kerosene, charcoal lighter fluid, or similar liquids to start or 'freshen up' a fire in this appliance. Keep all such liquids well away from the appliance when in use.
- △ **WARNING!** For outdoor use only. The installation of the pellet barbecue shall be located so flue gases including smoke will not communicate or enter any building. Consult with the local fire or building codes for additional requirements.
- △ **WARNING!** Creosote – Formation and need for removal. When wood pellets are burned slowly, they produce tar and other organic vapours that combine with expelled moisture to form creosote. When ignited, this creosote makes an extremely hot fire.
- △ **WARNING!** The ash and grease system and cookbox should be inspected before each cook to determine when grease and/or creosote buildup has occurred. When grease or creosote has accumulated, it should be removed to reduce the risk of fire.
- △ **WARNING!** Disposal of ashes – Ashes should be placed in a metal container with a tight-fitting lid. The closed container of ashes should be placed on a non-combustible floor or on the ground, well away from all combustible materials, pending final disposal. When the ashes are disposed by burial in soil or otherwise locally dispersed, they should be retained in the closed container until all cinders have thoroughly cooled.

- △ **WARNING!** Use only WEBER ALL NATURAL HARDWOOD PELLETS in this barbecue. Do not use heating fuel pellets. Pellet fuel average heating value of 7,900 BTU/LB (18,375.4 kJ/kg), ash content <1%.
- △ **WARNING!** Remove pots and pans while the operating appliance is unattended, to reduce the risk of fire.
- △ **CAUTION!** Do not use accessories not specified for use with this appliance.
- △ **WARNING!** Follow these guidelines to prevent carbon monoxide, a colorless, odorless gas from poisoning you, your family or others.
  - Know the symptoms of carbon monoxide poisoning: headache, dizziness, weakness, nausea, vomiting, sleepiness, and confusion. Carbon monoxide reduces the blood's ability to carry oxygen. Low blood oxygen levels can result in loss of consciousness and death.
  - See a doctor if you or others develop cold or flu like symptoms while cooking or in the vicinity of this appliance. Carbon monoxide poisoning, which can easily be mistaken for a cold or flu, is often detected too late.
  - Alcohol consumption and drug use increase the effects of carbon monoxide poisoning.
- △ **WARNING!** Carbon monoxide is especially toxic to mother and child during pregnancy, infants, the elderly, smokers, and people with blood or circulatory system problems, such as anemia, or heart disease.
- △ **WARNING!** Before filling your hopper with WEBER ALL NATURAL HARDWOOD PELLETS, visually inspect the hopper finger safety guard to ensure it is in place and not damaged. If damaged, immediately contact the Customer Service Representative in your area using the contact information on [weber.com](http://weber.com) for a replacement.
- △ **WARNING!** Do not use the barbecue in a confined and/or habitable space e.g. houses, tents, caravans, motor homes, boats. Danger of carbon monoxide poisoning fatality.

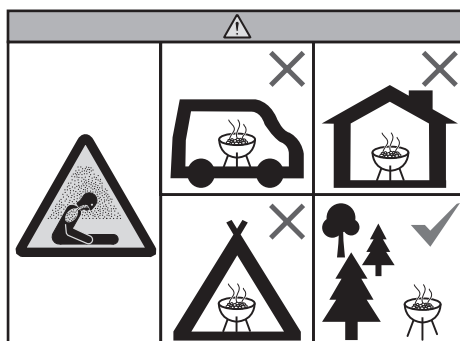

- △ **WARNING!** This equipment is not intended for use by persons (including children) whose physical, sensory or mental capacities are impaired or reduced, or who lack experience and knowledge, unless such individuals receive supervision or training on the operation of the equipment by a person responsible for their security.
- △ **WARNING!** Children should be supervised to ensure that they do not use this equipment as a toy.

### DANGERS

- △ **DANGER!** Do not use indoors! This barbecue is designed for outdoor use in a well-ventilated area and is not intended for and should never be used as a heater. If used indoors, toxic fumes will accumulate and cause serious bodily injury or death.
- △ **DANGER!** This barbecue is not intended for commercial use and is designed for outdoor household use only.
- △ **DANGER!** Do not use this barbecue in a garage, building, breezeway, tent, lanai, screened-in porch, or any other enclosed area.
- △ **DANGER!** Never perform maintenance on this barbecue while it is plugged into a power source. Always unplug the barbecue before servicing.

- △ **DANGER!** Hazardous voltage is present within the barbecue and can shock, burn or cause death. Always unplug the barbecue from the power source before servicing or cleaning.

### WARNINGS

- △ **WARNING!** Do not use this barbecue unless all parts are in place. This barbecue must be properly assembled according to the assembly instructions. Improper assembly may be dangerous.
- △ **WARNING!** Never operate this barbecue without the ash and grease system in place.
- △ **WARNING!** Never remove the ash and grease system while operating the barbecue.
- △ **WARNING!** Do not use charcoal briquettes, liquid fuel or lava rock with this barbecue.
- △ **WARNING!** Do not use this barbecue under any overhead combustible construction including ceilings and overhangs.
- △ **WARNING!** The use of alcohol, prescription, or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate the barbecue.
- △ **WARNING!** Exercise caution when operating your barbecue. It will be hot during preheating, cooking or cleaning, and should never be left unattended or moved while in use.
- △ **WARNING!** Keep children and pets away.
- △ **WARNING!** This barbecue is not intended to be installed in or on recreational vehicles and/or boats.
- △ **WARNING!** Do not use this barbecue within 60 cm of any combustible material. Combustible materials include, but are not limited to, wood or treated wood decks, patios, porches, vinyl siding, and patio doors.
- △ **WARNING!** Keep the barbecue on a secure, level surface at all times, clear of combustible materials.
- △ **WARNING!** Do not use the barbecue in high winds.
- △ **WARNING!** Do not wear clothing with loose flowing sleeves while lighting or operating the barbecue.
- △ **WARNING!** Never touch the cooking grills, burn pot, glow plug, ash and grease system, or barbecue to see if they are hot.
- △ **WARNING!** When finished cooking, push the menu button and turn the dial until the power symbol is highlighted, then push the dial to run the shutdown procedure and extinguish any fuel.
- △ **WARNING!** Use heat-resistant barbecue mitts or gloves while cooking and handling lid, warming rack, thermometer, or temperature probes.
- △ **WARNING!** Maximum side table load is 18 kg. Do not lean on or overload the side table.
- △ **WARNING!** Do not move, cover or store the barbecue until all fuel is extinguished and the barbecue is completely cool.
- △ **WARNING!** Do not use water to control flare ups or to extinguish fuel.
- △ **WARNING!** Use this barbecue only as described in this manual. Misuse may cause fire, electric shock or injury.



### REGISTER YOUR BARBECUE

Scan the QR code OR register at [weber-anz.registria.com](http://weber-anz.registria.com)

Serial Number

Write your barbecue's serial number in the box above for future reference. The serial number is on the barbecue's data label.

**A MAJOR CAUSE OF FIRES IS FAILURE TO MAINTAIN REQUIRED CLEARANCES (AIR SPACES) TO COMBUSTIBLE MATERIALS. IT IS OF UTMOST IMPORTANCE THAT THIS PRODUCT BE INSTALLED ONLY IN ACCORDANCE WITH THESE INSTRUCTIONS.**

**9501085**

AU/NZ

04/02/25

⚠ **WARNING!** This appliance should only be connected to a grounded outlet. Do not use plug adapters. If an extension cord is needed, only use a 14-gauge cable with a grounded plug, suitable for use with outdoor appliances. The maximum length for the extension cord is 4 meters. Keep the extension cord as short as possible. Examine the extension cord before use and replace if damaged. To minimise the risk of property damage and/or personal injury, do not use an extension power-supply cable unless it conforms to the specifications listed in this manual.

⚠ **WARNING!** Inspect the power cord and plug regularly for any signs of damage. Do not operate appliance with damaged cord or plug.

⚠ **WARNING!** Do not operate the unit if the electrical outlet is damaged.

⚠ **WARNING!** Always unplug the barbecue by pulling from the plug. Do not pull from the cord.

⚠ **WARNING!** Do not use the barbecue within 3 meters of any body of water, such as a pool or pond.

⚠ **WARNING!** Keep the power cord and extension cord away from any heated surfaces or water and arranged so as not to cause a tripping hazard.

⚠ **WARNING!** The food temperature probes are very sharp and can become hot when in use. Use care when handling the probes to avoid the risk of injury.

⚠ **WARNING!** The power cord supplied with your barbecue has a three-prong (grounding) plug for your protection against electrical shock hazard and should be plugged directly into a grounded three-prong outlet. Do not cut, remove or modify the plug in any way.

⚠ **WARNING!** WEBER recommends that you regularly check the burn pot, auger and cookbox for any obstructions that might block and prevent proper air flow. See the *RECOMMENDED CLEANING* section for more details.

⚠ **WARNING!** If the barbecue is stored outside during periods of non-use, rain or high humidity, the wood pellets should be inspected within the hopper to ensure they are dry. Hardwood pellets, when wet or exposed to high humidity, can expand, break apart and clog or obstruct the auger feeding system.

⚠ **WARNING!** If using the WEBER CONNECT app to monitor the operation of the barbecue, make sure that all safety precautions otherwise applicable to the operation of the barbecue have been observed prior to using the barbecue. Someone familiar with the operation of the barbecue must be in close proximity of the barbecue in order to address any emergencies that could arise. Do not leave the barbecue unattended.

⚠ **WARNING!** To decrease the chance of a grease fire, be sure the ash and grease system, heat deflector, and FLAVORIZER bar are all properly installed.

#### CAUTIONS

⚠ **CAUTION!** Make sure all electrical connections are kept dry and off of the ground.

⚠ **CAUTION!** Observe all local laws and regulations when using this appliance.

⚠ **CAUTION!** When connecting this appliance to a power supply, ensure that the supply voltage corresponds with the voltage rating marked on the appliance label.

⚠ **CAUTION!** Always unplug the barbecue from the outlet when not in use and before cleaning. Allow the barbecue to cool before performing maintenance.

⚠ **CAUTION!** Use extreme caution when removing the ash and grease system and disposing of hot grease or ashes.

⚠ **CAUTION!** Always store WEBER ALL NATURAL HARDWOOD PELLETS in a dry place located away from heat-producing appliances and moisture.

⚠ **CAUTION!** Maximum bottom shelf load is 18 kg. Do not stand on or overload bottom shelf.

Electrical Specifications	
Voltage	• 220 - 240V~
Frequency	• 50/60 Hz
Amperage	• 0.6 A



## WARRANTY

### Limited Warranty

Thank you for purchasing a WEBER product. Weber-Stephen Products LLC, 1415 S. Roselle Road, Palatine, Illinois 60067 ("WEBER") prides itself on delivering a safe, durable, and reliable product.

This is WEBER's Limited Warranty ("Warranty") provided to you at no extra charge. It contains the information you will need to have your WEBER product repaired in the unlikely event of a failure or defect.

**Pursuant to applicable laws, the customer has several rights in case the product is defective. Those rights include supplementary performance or replacement, abatement of the purchasing price, and compensation. These and other statutory rights remain unaffected by this warranty provision. In fact, this warranty grants additional rights to the Owner that are independent from statutory warranty provisions.**

#### WEBER'S LIMITED WARRANTY

WEBER warrants, to the purchaser of the WEBER product (or in the case of a gift or promotional situation, the person for whom it was purchased as a gift or promotional item) ("Owner"), that the WEBER product is free from defects in material and workmanship for the period(s) of time specified below when assembled and operated in accordance with the accompanying Owner's Manual, normal wear and tear excluded. (Note: If you lose or misplace your WEBER Owner's Manual, a replacement is available online at [www.weber.com](http://www.weber.com).) WEBER agrees within the framework of this warranty to repair or replace the part that is defective in material or workmanship subject to the limitations, and exclusions listed below. TO THE EXTENT ALLOWABLE BY APPLICABLE LAW, THIS WARRANTY IS EXTENDED ONLY TO THE ORIGINAL PURCHASER AND IS NOT TRANSFERABLE TO SUBSEQUENT OWNERS, EXCEPT IN THE CASE OF GIFTS AND PROMOTIONAL ITEMS AS NOTED ABOVE.

WEBER stands by its products and is happy to provide you with the Warranty described for material defects in the grill or its relevant components, normal wear and tear excepted.

- "Normal wear and tear" includes cosmetic and other immaterial deterioration that may come with ownership of your grill over time, such as surface rust, dents / scratches, etc.

However, WEBER will honor this Warranty for the grill or its relevant components where damage or dysfunction results from a material defect.

- "Material defect" includes rust through or burn through of certain parts, or other damage or failure inhibiting your ability to safely / properly use your grill.

#### OWNER'S RESPONSIBILITIES UNDER THIS WARRANTY

To ensure trouble-free warranty coverage, it is important (but it is not required) that you register your WEBER product online at [www.weber.com](http://www.weber.com). Please also retain your original sales receipt and/or invoice. Registering your WEBER product confirms your warranty coverage and provides a direct link between you and WEBER in case we need to contact you. If you have not had time to register your grill before calling for Warranty service, please have the following information available when you do call:

Name – Address – Phone Number – Email – Serial Number – Purchase Date – Purchase Dealer – Model – Color – Primary Issue  
The above warranty only applies if the Owner takes reasonable care of the WEBER product by following all assembly instructions, usage instructions, and preventative maintenance as outlined in the accompanying Owner's Manual, unless the Owner can prove that the defect or failure is independent of non-compliance with the above mentioned obligations. If you live in a coastal area, or have your product located near a pool, maintenance includes regular washing and rinsing of the exterior surfaces as outlined in the accompanying Owner's Manual.

#### WARRANTY HANDLING / EXCLUSION OF WARRANTY

If you believe that you have a part which is covered by this Warranty, please contact WEBER Customer Service using the contact information on our website ([www.weber.com](http://www.weber.com)), or such country-specific website to which Owner may be redirected). WEBER will, upon investigation, repair or replace (at its option) a defective part that is covered by this Warranty. In the event that repair or replacement are not possible, WEBER may choose (at its option) to replace the barbecue in question with a new barbecue of equal or greater value. WEBER may ask you to return parts for inspection, shipping charges to be pre-paid by owner. When you contact Customer Service, please have the following information available:  
Name – Address – Phone Number – Email – Serial Number – Purchase Date – Purchase Dealer – Model – Color – Primary Issue

This WARRANTY lapses if there are damages, deteriorations, discolorations, and/or rust for which WEBER is not responsible caused by:

- Abuse, misuse, alteration, modification, misapplication, vandalism, neglect, improper assembly or installation, and failure to properly perform normal and routine maintenance;
- Insects (such as spiders) and rodents (such as squirrels), including but not limited to damage to burner tubes and/or gas hoses;

- Exposure to salt air and/or chlorine sources such as swimming pools and hot tubs/spas;
- Severe weather conditions such as hail, hurricanes, earthquakes, tsunamis or surges, tornadoes or severe storms.
- Acid rain and other environmental factors.

Using third party parts will not void this Warranty. However, any parts that are used and/or installed on your WEBER product that are not genuine WEBER parts are not covered by this Warranty. In addition, any damages that result from the use and/or installation of parts on your WEBER product that are not genuine WEBER parts are not covered by this Warranty.

#### PRODUCT WARRANTY PERIODS

Cook box and all components not covered below:  
5 years

Electrical components:  
3 years

Cooking grills, burn pot, heat diffuser, heat deflector, controller bezel:  
3 years

#### DISCLAIMERS

**APART FROM THE WARRANTY AND DISCLAIMERS AS DESCRIBED IN THIS WARRANTY STATEMENT, THERE ARE EXPLICITLY NO FURTHER WARRANTY OR VOLUNTARY DECLARATIONS OF LIABILITY GIVEN HERE WHICH GO BEYOND THE STATUTORY LIABILITY APPLYING TO WEBER. THE PRESENT WARRANTY STATEMENT ALSO DOES NOT LIMIT OR EXCLUDE SITUATIONS OR CLAIMS WHERE WEBER HAS MANDATORY LIABILITY AS PRESCRIBED BY STATUTE.**

**NO WARRANTIES SHALL APPLY AFTER THE APPLICABLE PERIODS OF THIS WARRANTY. NO OTHER WARRANTIES GIVEN BY ANY PERSON, INCLUDING A DEALER OR RETAILER, WITH RESPECT TO ANY PRODUCT (SUCH AS ANY "EXTENDED WARRANTIES"), SHALL BIND WEBER. THE EXCLUSIVE REMEDY OF THIS WARRANTY IS REPAIR OR REPLACEMENT OF THE PART OR PRODUCT.**

**IN NO EVENT UNDER THIS WARRANTY SHALL RECOVERY OF ANY KIND BE GREATER THAN THE AMOUNT OF THE PURCHASE PRICE OF THE WEBER PRODUCT SOLD.**

**YOU ASSUME THE RISK AND LIABILITY FOR LOSS, DAMAGE, OR INJURY TO YOU AND YOUR PROPERTY AND/OR TO OTHERS AND THEIR PROPERTY ARISING OUT OF THE MISUSE OR ABUSE OF THE PRODUCT OR FAILURE TO FOLLOW INSTRUCTIONS PROVIDED BY WEBER IN THE ACCOMPANYING OWNER'S MANUAL. PARTS AND ACCESSORIES REPLACED UNDER THIS WARRANTY ARE WARRANTED ONLY FOR THE BALANCE OF THE ABOVE MENTIONED ORIGINAL WARRANTY PERIOD(S).**

**THIS WARRANTY APPLIES TO PRIVATE SINGLE FAMILY HOME OR APARTMENT USE ONLY AND DOES NOT APPLY TO WEBER BARBECUES USED IN COMMERCIAL, COMMUNAL OR MULTI-UNIT SETTINGS SUCH AS RESTAURANTS, HOTELS, RESORTS, OR RENTAL PROPERTIES.**

**WEBER MAY FROM TIME TO TIME CHANGE THE DESIGN OF ITS PRODUCTS. NOTHING CONTAINED IN THIS WARRANTY SHALL BE CONSTRUED AS OBLIGATING WEBER TO INCORPORATE SUCH DESIGN CHANGES INTO PREVIOUSLY MANUFACTURED PRODUCTS, NOR SHALL SUCH CHANGES BE CONSTRUED AS AN ADMISSION THAT PREVIOUS DESIGNS WERE DEFECTIVE.**

#### Webster-Stephen Products LLC

##### Customer Service Center

1415 S. Roselle Road  
Palatine, IL 60067  
U.S.A.

#### For replacement parts, call:

1-800-446-1071

#### Webster-Stephen Products (Aust) Pty Ltd.

Level 1, 142-144 Fullarton Road  
ROSE PARK SA 5067 AUSTRALIA  
1300 301 290

#### WEBER New Zealand ULC

86 East Highbrook Drive  
East Tamaki, Auckland 2013 NEW ZEALAND  
0800 493 237



## COOKING SYSTEM

### A WEBER PORCELAIN ENAMEL Lid

Built to outlast the competition, SEARWOOD's shine goes far beyond looks. The exclusive WEBER Porcelain-Enamelled finish withstands the elements and helps prevent rusting and cracking over time.

### B Large Hopper

The large capacity hopper holds an entire 9 kg bag of pellets - the perfect size for long duration smoking.

### C Responsive Engine

Engineered with WEBER's RAPID REACT PID, this DC powered engine was built to heat hotter and faster than most pellet barbecues in order to reach a 82°-315°C temperature range. This gives you the versatility to sear steaks, smoke BBQ ribs, bake pizza, griddle, and everything in between.

### D Pull and Clean Grease and Ash System

Designed for quick and easy clean up without requiring a vacuum, the grease and ash collect in the grease tray located at the bottom of the cookbox. Grease and ash can then flow to the grease catch for easy disposal.

### E Glow Plug Ignition

The glow plug provides ignition of the fuel within the burn pot.



## PELLET BARBECUING 101

### How Does the WEBER SEARWOOD Work?

The WEBER SEARWOOD works by delivering WEBER ALL NATURAL HARDWOOD PELLETS to the burn pot via an auger tube system. Once the pellets are fed into the burn pot, a glow plug ignites these pellets. This starts up your barbecue, and will reach and maintain the temperature you set on the attached WEBER CONNECT Digital LCD Controller. Once the glow plug ignites the pellets, it will remain off for the remainder of the cooking session. The barbecue's fan provides oxygen through the burn pot to fuel the fire throughout your cook.

### Barbecuing Recommendations

- For optimal cook performance, download and use the WEBER CONNECT app with your SEARWOOD barbecue to automatically get the latest and greatest software and feature updates.
- When using only the top rack to barbecue or smoke over longer periods of time, WEBER encourages the use of a large WEBER drip pan on the lower cooking grills to catch grease and food drippings.
- Always keep the barbecue lid closed during preheating and cooking for best performance.

### Pellet Quality Matters

Using high quality WEBER ALL NATURAL HARDWOOD PELLETS is essential for optimal barbecue operation. The pellets should have a crisp snap when broken, instead of easily crumbling apart, to avoid barbecue performance issues. Good quality pellets should give off minimal dust and should not appear faded or white in color. They should also always be stored in an airtight container to prevent the absorption of moisture and humidity. Always store WEBER ALL NATURAL HARDWOOD PELLETS in an airtight container located indoors away from heat-producing appliances and moisture.

### Recommended SEARWOOD Maintenance

- Clean the grease tray and grease catch before every cook.
- Using the included scraper, clean and remove the cooking grates, large FLAVORIZER bar, heat diffuser, and heat deflector from the cookbox.

**NOTE:** Tip the heat diffuser to empty ash before removing it from the cookbox.

- Next, scrape the cookbox and clear the burn pot of any ash or debris. This process should be done after every low and slow cook to high heat sear, 12 hours or 9 cook sessions, whichever comes first.
- Always run a full shutdown after each cook to ensure barbecuing success the next time.

- Purge and empty the hopper and auger tube every 4 weeks with regular use. Every 2 weeks without regular use.
- Using a dry, non-abrasive cloth, clean the fuel gauge lens every 10 bags of pellets used (Select models only).

**NOTE:** For more detailed maintenance and cleaning instructions, please visit [weber.com](http://weber.com) or scan the QR code on the front cover of this Owner's Guide.



## SPECIAL FEATURES

### A WEBER CONNECT Digital LCD Controller

The WEBER CONNECT Digital LCD Controller gives you complete control over how your WEBER SEARWOOD barbecue operates. Use the controller to start up your barbecue, select temperature settings, monitor your cook, and more.

### B DIRECTFLAME Cooking System

The DIRECTFLAME cooking system gives food open access to the flame for flavourful, rich browning and crisping across the entire cooking grill. The FLAVORIZER bar elevates DIRECTFLAME cooking by catching drippings and adding sizzle and smoke for an amazing boost of flavour.

### C Integrated Wi-Fi and Bluetooth®

Using your smartphone, login to the WEBER CONNECT app to get the latest software and connect to your barbecue. The WEBER CONNECT app not only ensures you have access to the latest software and firmware for optimal performance, but also tells you when it's time to flip, rest, and serve directly from your smartphone. The remote barbecuing access feature gives you the freedom to walk away, monitor, and even adjust the heat from the palm of your hand.

### D Ambient and Food Temperature Probes

In order to remotely monitor your grill temperature and internal food temperatures, your SEARWOOD barbecue comes with an attached ambient temperature probe and food temperature probes that will directly connect and interact with the controller. The controller can hold 2 food temperature probes.

### E Accessories

Add on to your SEARWOOD barbecue to customize your grilling experience. Visit [www.weber.com](http://www.weber.com) to find all of your favourite WEBER accessories.



## GETTING STARTED

### Preparing Grill For First Time Startup

Before the first startup of your WEBER SEARWOOD barbecue, there are some necessary steps to be followed:

1. Remove all packaging materials from the barbecue.
2. Open the barbecue lid and make sure the heat deflector, heat diffuser, large FLAVORIZER bar, and cooking grills are properly installed inside the cookbox.
3. Check that the grease and ash system is properly installed and a disposable WEBER drip pan is used to line the grease catch.
4. Plug the power cord into the back of the hopper before plugging it into a grounded electrical outlet.
5. Open the hopper lid and check that the hopper safety guard is in place and ensure there are no foreign objects obstructing the auger located inside the bottom of the hopper.

**NOTE:** Make sure the pellet release handle is closed before filling the hopper with pellets.

6. Fill the hopper with your choice of WEBER ALL NATURAL HARDWOOD PELLETS. Close the hopper lid when filled.

### WEBER CONNECT App

First things first.

Scan the QR code to download the WEBER CONNECT app.



Get the most out of your WEBER SEARWOOD by downloading the WEBER CONNECT app to fully update your barbecue and register to activate your warranty.

Download, connect and register for:

- Remote Barbecue Temperature Control
- Flip and Serve Notifications
- Food Readiness Countdowns
- Step-by-step Barbecuing Assistance

Connecting To Bluetooth® or Wi-Fi Network

To connect your WEBER SEARWOOD barbecue via Bluetooth® or your local Wi-Fi network, follow these steps:

**TIP:** WEBER recommends connecting your barbecue to your local Wi-Fi network for easy, fast software updates.

**NOTE:** WEBER recommends that your smartphone be running the latest version of its operating system before attempting to connect your barbecue to Bluetooth® or your Wi-Fi network.

1. Verify that your smartphone is connected to Bluetooth® or your local Wi-Fi network.
2. From your smartphone, download the WEBER CONNECT app from the App Store on Apple smartphones, or the Play Store on Android smartphones.
3. Open the WEBER CONNECT app and follow the in-app instructions for connecting to your SEARWOOD barbecue. When paired, your digital controller will automatically update your software in the background each time the barbecue is connected.

**NOTE:** In order to successfully connect your smartphone to your barbecue via a local Wi-Fi network, first make sure your barbecue is paired via Bluetooth® and that your barbecue is within range of your Wi-Fi router. If your attempts to connect have been unsuccessful, try moving the barbecue within range of the Wi-Fi router or adding a signal extender for a stronger signal. Be sure to locate the barbecue at least 60 cm away from any combustible materials and flammable liquids.

### Meal to Meal Maintenance Every Time You Cook

To ensure that your WEBER SEARWOOD barbecue operates safely and smoothly every time you start it up, here are some steps to follow before you start barbecuing:

1. Using a grill brush or wooden scraper, clean the cooking grills.
2. Clean the inside of the cookbox of grease and ash, then clean the grease tray and empty the grease pan before every cook.

**NOTE:** Always use a WEBER disposable drip pan inside the grease pan.

**WARNING:** DO NOT REMOVE THE GREASE TRAY OR GREASE PAN WHILE OPERATING THE BARBECUE, OR IF STILL HOT AFTER SHUTDOWN. Frequently replace the disposable drip pan before igniting the barbecue to reduce the risk of a grease fire.


3. Make sure the hopper is filled with your choice of WEBER ALL NATURAL HARDWOOD PELLETS.
4. Check that the power cord is connected to the back of the hopper before plugging it into an electrical outlet.

⚠ **WARNING!** Keep the power cord and any extension cords away from heated surfaces or water, and ensure they are arranged to avoid tripping hazards.



# WEBER CONNECT DIGITAL LCD CONTROLLER

Download the WEBER CONNECT app to get the latest barbecue software and controller features.

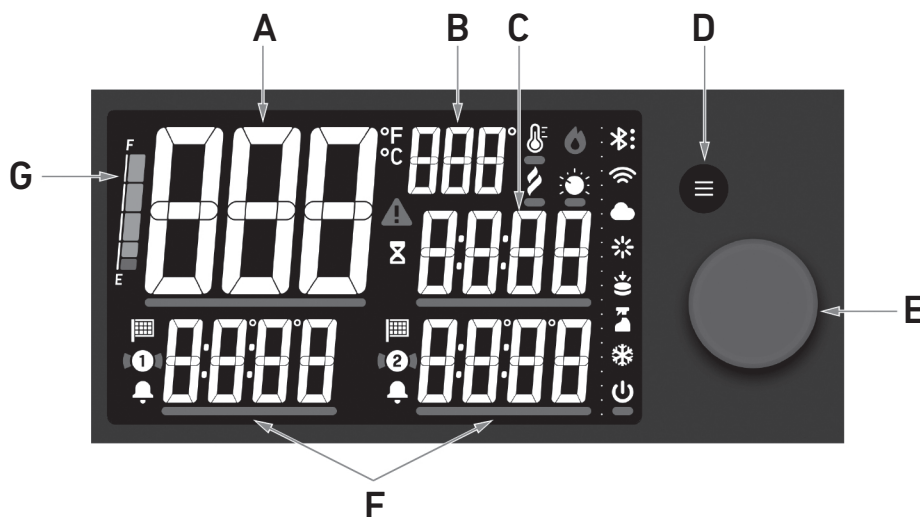

## A Main Quadrant

The Main Quadrant is where you can select your temperature or Manual Mode level. Once set, the current cavity temperature, Manual Mode level or Error Code will populate here.

## B Set Temperature

Once you set a temperature, it will appear here and the Main Quadrant will display your cavity temperature.

## C Timer Quadrant

Use the selection dial to increase or decrease the desired amount of time. Push the dial to select and start your timer. A timer icon ⌚ indicates a timer is set. This quadrant will also display the shut down timer when shut down is active.

## D Main Menu/Back

Pressing the ⌂ button returns you to the Main Menu. Using the selection dial, scroll to your desired quadrant/icon and press to select. Pressing the Main Menu button again will return you to prior screen.

## E Selection Dial

Turn the Selection Dial to adjust barbecue temperature, navigate through the quadrants, and more.

## F Food Probe Quadrants

Your new WEBER SEARWOOD has two food temperature probe ports (probes included) to gain superior control over your barbecue for perfect results every time. The alarm icon 🔔 indicates a food temperature probe alert is set. When running a cook program, an ETA flag icon 🚩 will appear when a time to completion is available.

## G Fuel Gauge (Select Models)

Select models of SEARWOOD come with a Fuel Gauge which will indicate your fuel level without looking into the hopper.

## Connectivity Icons

These icons indicate strength of your barbecue's Bluetooth and Wifi connection. The Cloud icon ☁ indicates when your barbecue is connected to the cloud.

## Set Temperature

Use the selection dial to select this cook mode and set a temperature from 95°-315°C then let the RAPID REACT PID do the rest.

## SMOKEBOOST

Use the selection dial to select this cook mode which adds an extra kick of smoky, wood-fired flavour to your food for low and slow cooks.

## Manual Mode

Use the selection dial to select this cook mode which switches to a constant fuel and fan speed for barbecue levels 1-10 (low to high) for open-lid cooking or griddling, without your barbecue overcorrecting.

## Shut Down

When your cook has ended, use the Selection Dial to select the Shut Down icon to shut down your barbecue.

## Fire Icon

This icon indicates when the barbecue is in an active cook mode.

## Spinner Icon

This icon indicates an update is being applied. Your barbecue will still operate while this is happening in the background.

## Push Dial Icon

This icon indicates when a selection dial press is required.

## Cleaning Icon

This icon indicates a reminder to clean your barbecue. Regular cleaning and maintenance ensures optimal barbecue performance.

## Cold Weather Icon

In the event of cold ambient temperatures, this icon indicates the possibility of a longer start up time.

## Error Icon

This icon indicates when an error or notification occurs. The error code will be displayed in the Main Quadrant.





## GRILL OPERATION

### First Time Startup Procedure

Once all of the setup steps have been followed in the previous section "GETTING STARTED", you can now initiate the startup procedure to preheat your SEARWOOD barbecue for the first time.

**IMPORTANT:** Remove any marketing material on the outside of the barbecue prior to barbecuing.

**NOTE:** If this is the very first time starting your SEARWOOD barbecue, WEBER recommends that you season your barbecue at 230°C for at least 30 minutes with the barbecue lid closed.

Please follow these steps the very first time you ignite your barbecue:

1. Make sure your barbecue is plugged in and your hopper is filled with your choice of WEBER ALL NATURAL HARDWOOD PELLETS.
2. If your barbecue has been plugged in and the screen is not lit, wake your barbecue up by pushing the menu button or selection dial.
3. Turn the selection dial to select 230°C, then push the selection dial to select it.
4. With the barbecue lid closed, allow the barbecue to reach the set temperature of 230° C and run for 30 minutes to season.
5. After 30 minutes, open the barbecue lid and clean the cooking grills using a barbecue brush, then close the barbecue lid.
6. Push the main menu button . Using the selection dial on the controller, scroll through the main menu to the power symbol and push to shutdown barbecue.
7. Your SEARWOOD barbecue will begin shutdown indicated by a blinking icon and activated countdown timer. Once the shutdown procedure is complete and the barbecue has cooled, unplug the barbecue from the power source.

**TIP:** You may resume cooking at any time during shut down. To resume cooking after shut down is initiated, press the selection dial or main menu button . Turn the selection dial to set your barbecue temperature or navigate to your desired cook mode and press to select.

**WARNING:** ALWAYS MAKE SURE THE BARBECUE IS COMPLETELY COOLED AND UNPLUGGED FROM POWER SOURCE BEFORE PERFORMING ANY MAINTENANCE OR CLEANING.

8. Remove the internal barbecue components and clean your cookbox by pushing the ash into the grease catch with the included plastic scraper. For more information on recommended cleaning, please visit [weber.com](http://weber.com) or scan the QR code on the front cover of this Owner's Guide.
9. Properly reinstall all of the internal barbecue components into the cookbox. Once you plug the barbecue back in, you can start cooking, connect food temperature probes, start a timer, or select a cook program from the WEBER CONNECT app.

### Setting a Target Temperature

To set a target barbecue temperature, follow these steps:

1. Push the main menu button .
2. Using the selection dial on your controller, scroll to the set temperature icon and push selection dial to select. Scroll to select your desired temperature and push the selection dial to confirm it.

**SHORTCUT:** To quickly set a temperature on the barbecue from sleep or the home screen, simply wake the barbecue up and turn dial to select your desired temperature. You can also select SMOKEBOOST with this shortcut.

3. Make sure the barbecue lid is closed while the barbecue is preheating to your selected temperature.
4. When the barbecue has reached the selected temperature, open the barbecue lid and clean the cooking grills using a barbecue brush.
5. Start barbecuing! You can now connect food temperature probes, start a timer, or select a cook program from the WEBER CONNECT app.

**TIP:** For an extra kick of smoky, wood fired flavor on your low and slow cooks, use SMOKEBOOST. To enter SMOKEBOOST, push the main menu button . Scroll the dial to the right to the SMOKEBOOST icon and push to select it. Your barbecue will now adjust to a temperature range between 180°-200°F (82°-95°C), dependent on ambient condition.

### Cooking with Temperature Probes

Use the included food temperature probe to gain complete control of your WEBER SEARWOOD for the perfect food outcome, every time.

**WARNING:** Handling the food temperature probes without hand protection will result in severe burns. Always wear heat protective barbecue mitts or gloves when handling temperature probes.

Please follow these steps for using food temperature probes:

1. Once the barbecue has been preheated, using heat resistant barbecue mitts or gloves, open the barbecue lid and clean the cooking grills using a barbecue brush.
2. Insert food temperature probe(s) into the centre of the thickest part of your food, then place it on the cooking grills.
3. Plug the food temperature probe(s) into the probe hub at the front of the barbecue.
4. Close the barbecue lid.
5. From the controller display, select the corresponding four probe quadrant to set a food temperature alert, or select a cook program from the WEBER CONNECT app. For more information on using temperature probes and cook programs, please visit [weber.com](http://weber.com) or scan the QR code on the front cover of this Owner's Guide.

**NOTE:** Be sure to route the food temperature probe wires through the channel in the barbecue cookbox to prevent damage.

### Using Manual Mode

There may be occasions when you simply want to barbecue some sausages, or use the WEBER CRAFTED GRIDDLE to cook smash burgers. Follow these instructions to use the manual mode when cooking with the barbecue lid open:

1. Push the main menu button .
2. Turn the selection dial to highlight the manual mode scale , and push the selection dial to confirm.
3. Turning the selection dial left or right, you can now set the barbecue heat intensity level that you wish using a scale of 1 to 10 (low to high). Push the selection dial to make your selection.

**NOTE:** If you wish to adjust the barbecue heat intensity level, simply turn the selection dial to the right or left and select your desired level of heat. To exit this mode, push the main menu button and turn the selection dial to select the Set Temperature or SMOKEBOOST icon and select your desired temperature.

### Shutting Down Your Barbecue

When your cook has ended, your WEBER SEARWOOD must be properly powered down to clear the burn pot of any remaining pellets and ashes. This ensures your barbecue is ready to go the next time you want to start it up.

Please follow these steps to properly shut down your WEBER SEARWOOD:

1. When your food is cooked to your desired internal temperature, using heat resistant barbecue mitts or gloves, open the barbecue lid, unplug any food temperature probes from the probe hub and remove all food from the cooking grills.

**WARNING:** Food temperature probes, barbecue handles and barbecue surfaces will be hot. Always use heat resistant barbecue mitts or gloves before handling, cleaning, moving, or storing the barbecue or its parts.

2. Close the barbecue lid.
3. Push the main menu button . Using the selection dial on the controller, scroll through the main menu, and push to select the power symbol .

**CAUTION:** Always ensure the shutdown procedure is complete to properly shutdown your barbecue when finished cooking. Frequently interrupted cook cycles could cause component failure.

4. Your SEARWOOD barbecue will begin shutdown indicated by a blinking icon and activated countdown timer. Once the shutdown procedure is complete and the barbecue has cooled, unplug the barbecue from the power source.

**TIP:** You may resume cooking at any time during shut down. To resume cooking after shut down is initiated, press the selection dial or main menu button . Turn the selection dial to set your barbecue temperature or navigate to your desired cook mode and press to select.

**NOTE:** Your barbecue will go to sleep after 5 minutes of being idle, if no food probes are plugged in. To wake your barbecue back up, press the main menu button or selection dial.

**WARNING:** ALWAYS MAKE SURE THE BARBECUE IS COMPLETELY COOLED AND UNPLUGGED FROM A POWER SOURCE BEFORE PERFORMING ANY MAINTENANCE OR CLEANING.

### Changing Pellets

There may be times when you want to change the WEBER ALL NATURAL HARDWOOD PELLET flavour for your next barbecuing session.

1. Set a large container or bucket underneath the pellet chute at the bottom of the hopper.
2. Pull the pellet release handle located on the side of the hopper to release the pellets into the container below.

We recommend using WEBER ALL NATURAL HARDWOOD PELLETS with your SEARWOOD barbecue. For best results, store your pellets in an airtight container to prevent moisture from impacting pellet performance. Always check the condition of your pellets before barbecuing. The best way to judge the freshness of pellets is to break one in half. Pellets should break with a snap, not crumble in your hand. Pellets that crumble in your hand may impact the performance of your barbecue.

Purging the pellets from the auger is critical for periodic maintenance and before barbecue storage/non-use. For more information, please visit [weber.com](http://weber.com) or scan the QR code on the front cover of this Owner's Guide.

### Barbecuing Methods

Your WEBER SEARWOOD is capable of many different cooking methods, such as smoking, roasting, barbecuing, searing, griddling, baking and braising. Part of the excitement of pellet barbecuing is that you get to enjoy all of your favourite recipes infused with real hardwood flavour. This element of flavour can elevate your average meal and make it something extraordinary.

**NOTE:** When using only the top rack to barbecue or smoke over longer periods of time, WEBER encourages the use of a large WEBER drip pan on the lower cooking grills to catch grease and food drippings.

### Explore Your Settings

There are many features to be explored on the controller and the WEBER CONNECT app. From programmable timers to cook programs, there are more reasons to love your WEBER SEARWOOD barbecue. Explore and experiment with all the possibilities.



## ERROR CODES

### Error Codes

The controller uses advanced technology capable of troubleshooting your SEARWOOD barbecue. If a problem is detected with your barbecue, the controller will display the error code and send a notification through your WEBER CONNECT app. For quick reference, please see the list of error codes below. Refer to the full troubleshooting section at [weber.com](http://weber.com) or scan the QR code on the front cover of this Owner's Guide. Follow the instructions to remedy and clear the errors.

E1 - Auger Jam

E2 - Fan Motor Failure

E3 - Loss of Flame

E4 - Communication Error

E5 - Barbecue Too Hot

E6 - Flame Not Started

E7 - Auger Motor Failure

E8 - Thermocouple Error

E10 - Improper Shutdown

E11 - Glow Plug Failure

E16 - Barbecue ID Error

Some error codes notify you of a potential critical error before it happens. These notifications can be cleared from the controller by pressing the dial.

E9 - Fuel Gauge Error Notification (select models only)

E17 - Probe Hub Error Notification

E18 - Temperature Drop Notification

E19 - Flame Out Notification

E20 - Dirty Fuel Gauge Notification (select models only)

E21 - Low Fuel Notification (select models only)


**For more information on using and maintaining your WEBER SEARWOOD barbecue, please scan the QR code below or visit us at [weber.com](http://weber.com).**





## REPLACEMENT PARTS


SEARWOOD 600 - AU/NZ 101224

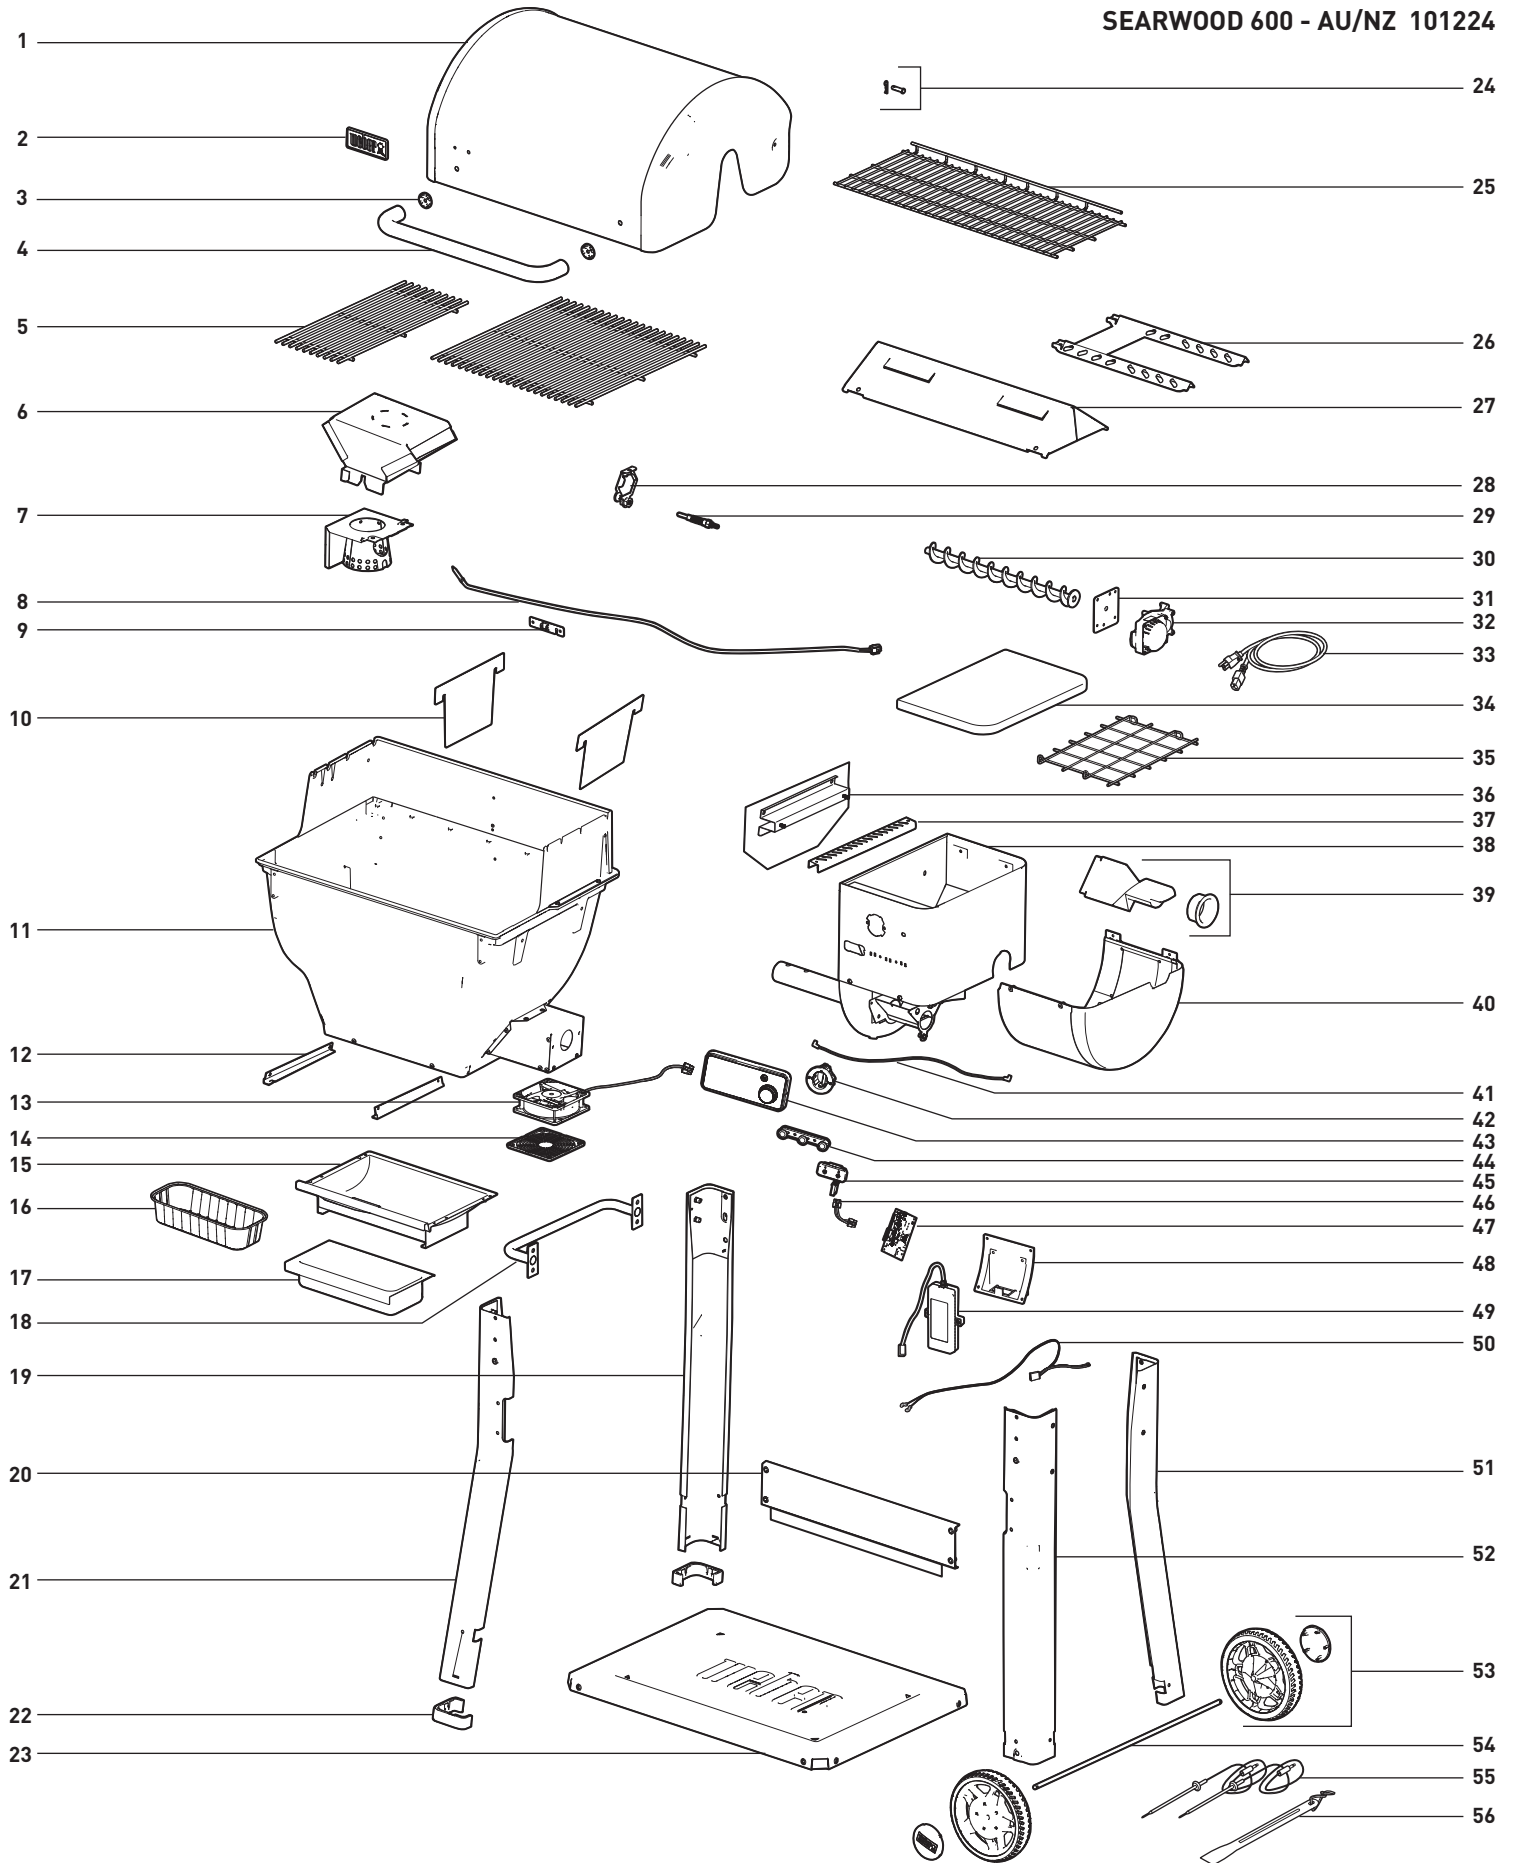



# REPLACEMENT PARTS

SEARWOOD 600XL - AU/NZ 101224

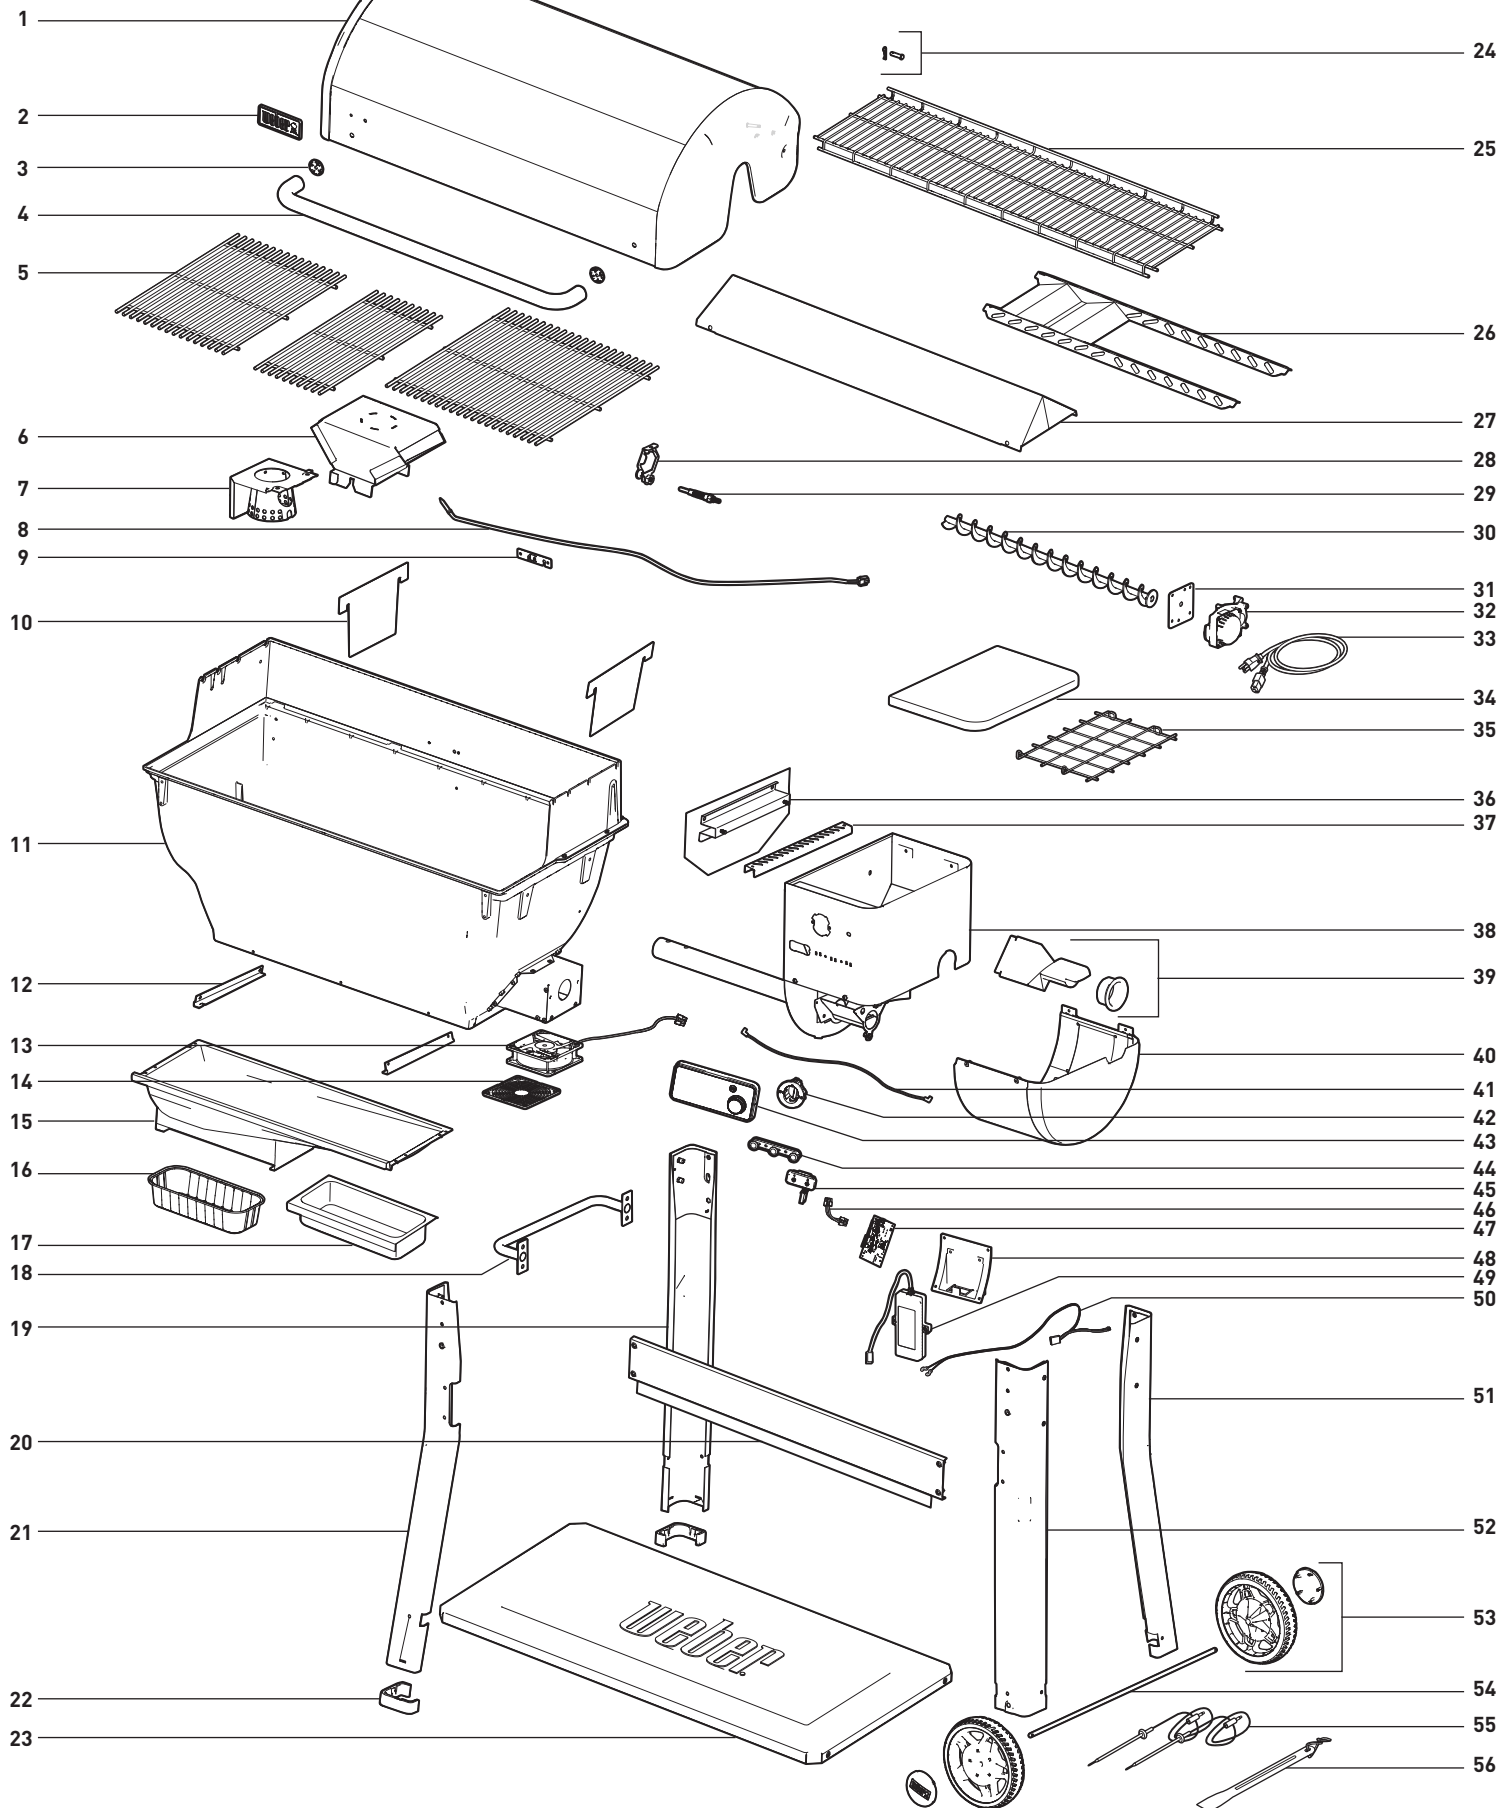



**Weber-Stephen Products (Aust) Pty Ltd.**

Level 1, 142-144 Fullarton Road  
ROSE PARK SA 5067 AUSTRALIA  
1300 301 290 | [www.weberbbq.com.au](http://www.weberbbq.com.au)

**WEBER New Zealand ULC**

86 East Highbrook Drive  
East Tamaki, Auckland 2013 NEW ZEALAND  
0800 493 237 | [www.WEBERnz.co.nz](http://www.WEBERnz.co.nz)



**WEBER-STEPHEN PRODUCTS LLC**

[www.weber.com](http://www.weber.com)

© 2025 Designed and engineered by Weber-Stephen Products LLC,  
1415 S. Roselle Road, Palatine, Illinois 60067 USA.