



PERFORMER PREMIUM

EN ASSEMBLY GUIDE

ZH 组装指南

JA 組み立てガイド

KO 조립 설명서

ID PANDUAN PERAKITAN

TH คู่มือการประกอบชิ้นส่วน

22 inch
(57 cm)



Read the owner's guide before using the barbecue.

Baca panduan pemilik sebelum menggunakan pemanggang ini.

バーベキューのご使用前に製品の取扱説明書をお読みください

 
 
 
 
 
 
 
 
 
 
 
 
그릴을 사용하기 전에 사용자 설명서를 읽어보십시오.

อ่านคู่มือผู้ใช้นำก่อนใช้เตาอย่างบาร์บีคิว


使用烤架之前请阅读用户指南。

51861

ASIA 09/06/19

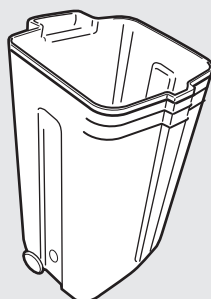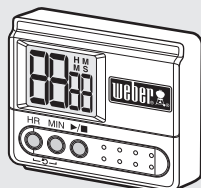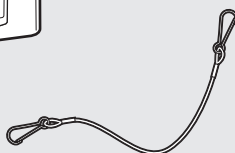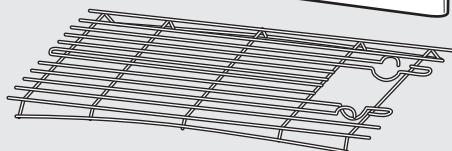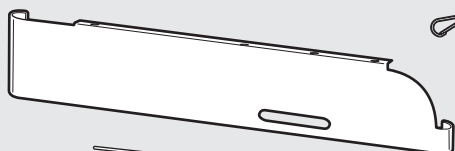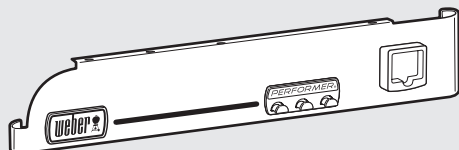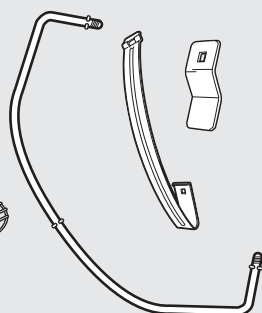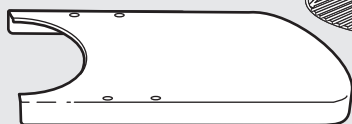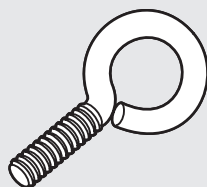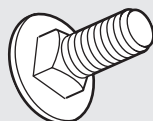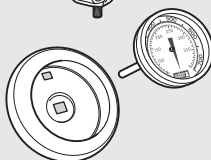


2-

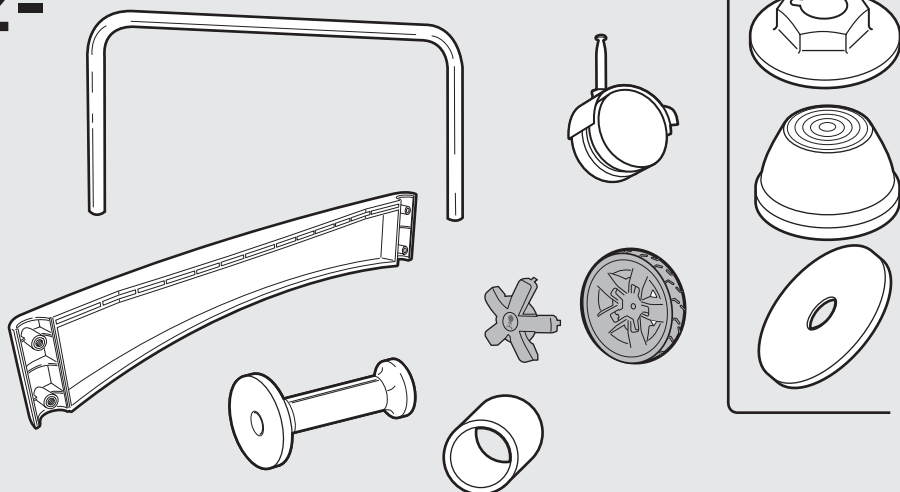 

3-



 
4-

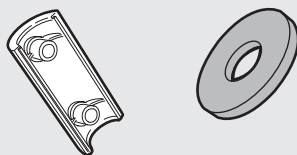


5-




 
8-

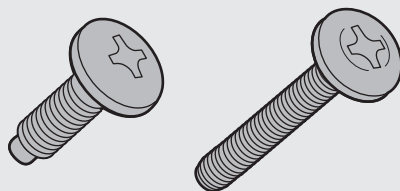



1

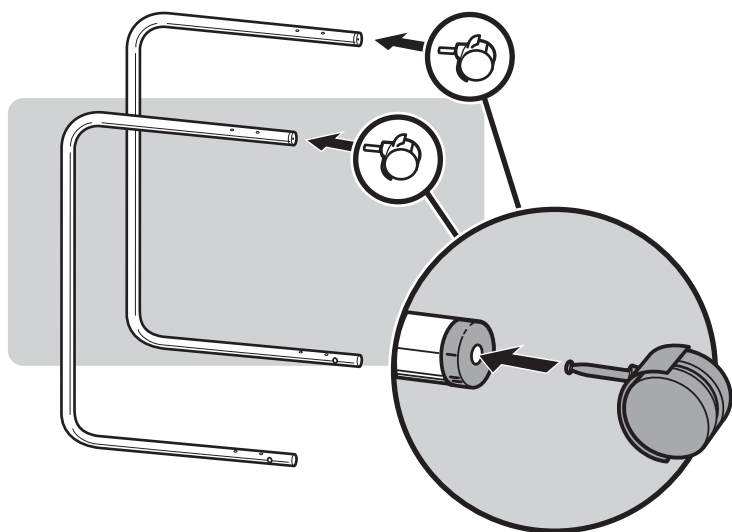 


2

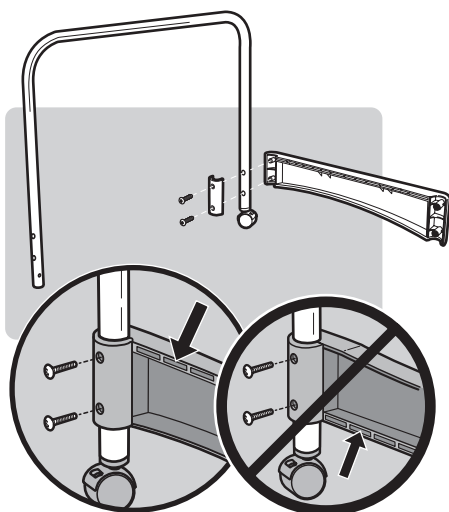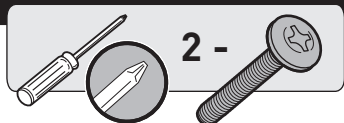  


3

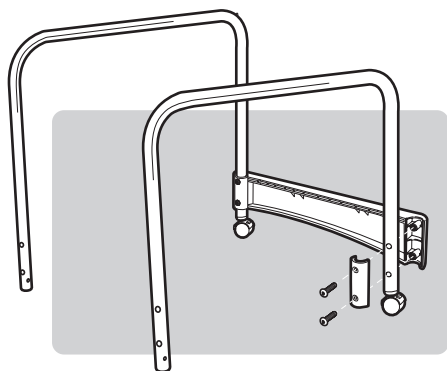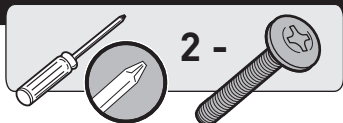  


4

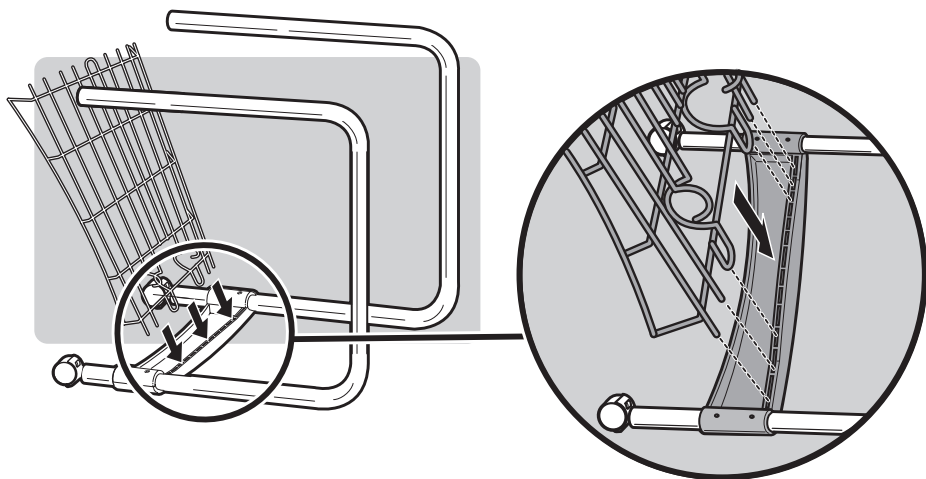 

5

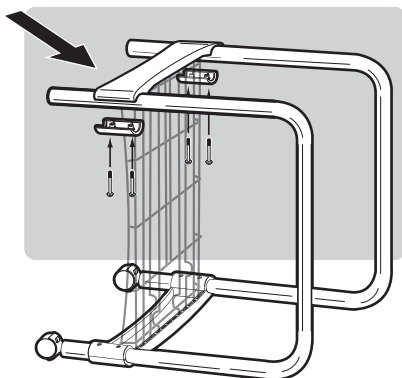 



6





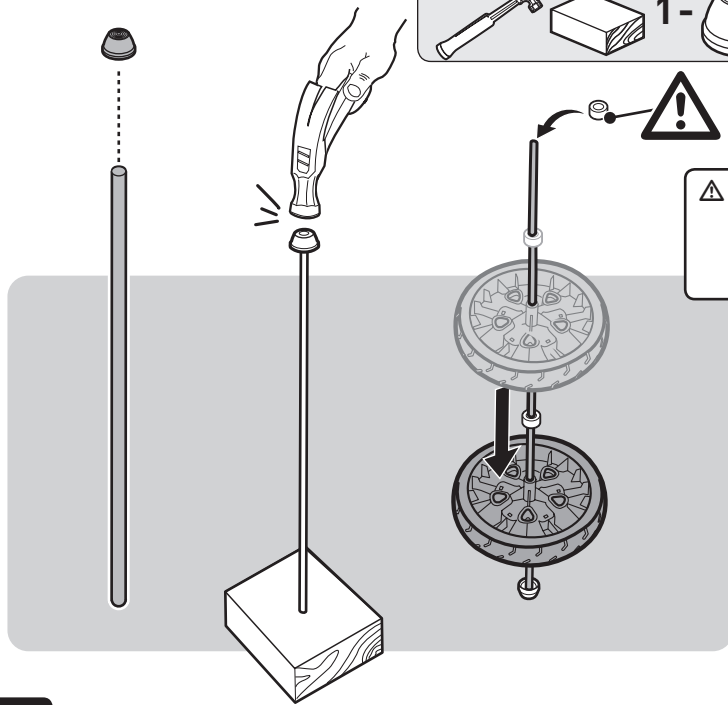 


7

       IMPORTANT: Make sure to insert the wheel spacer before continuing.

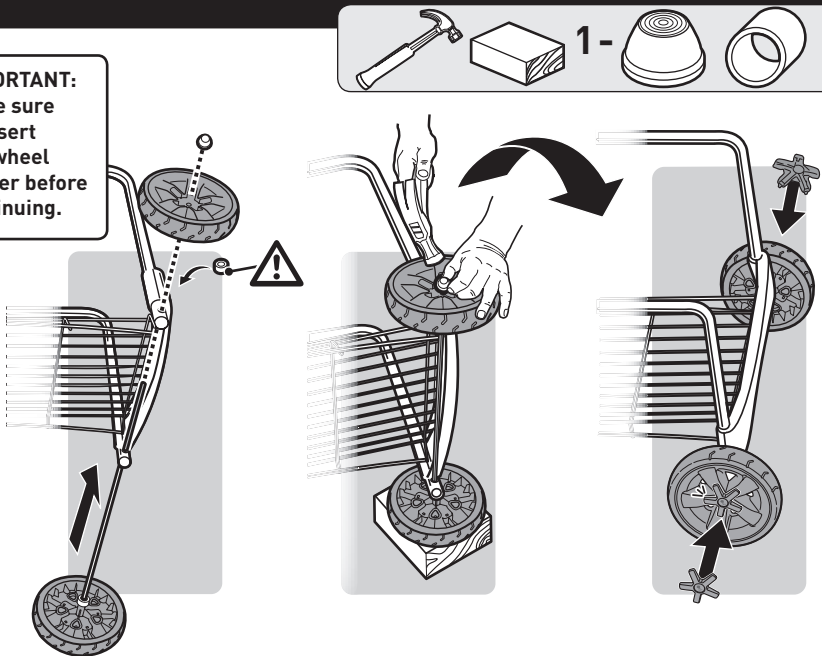


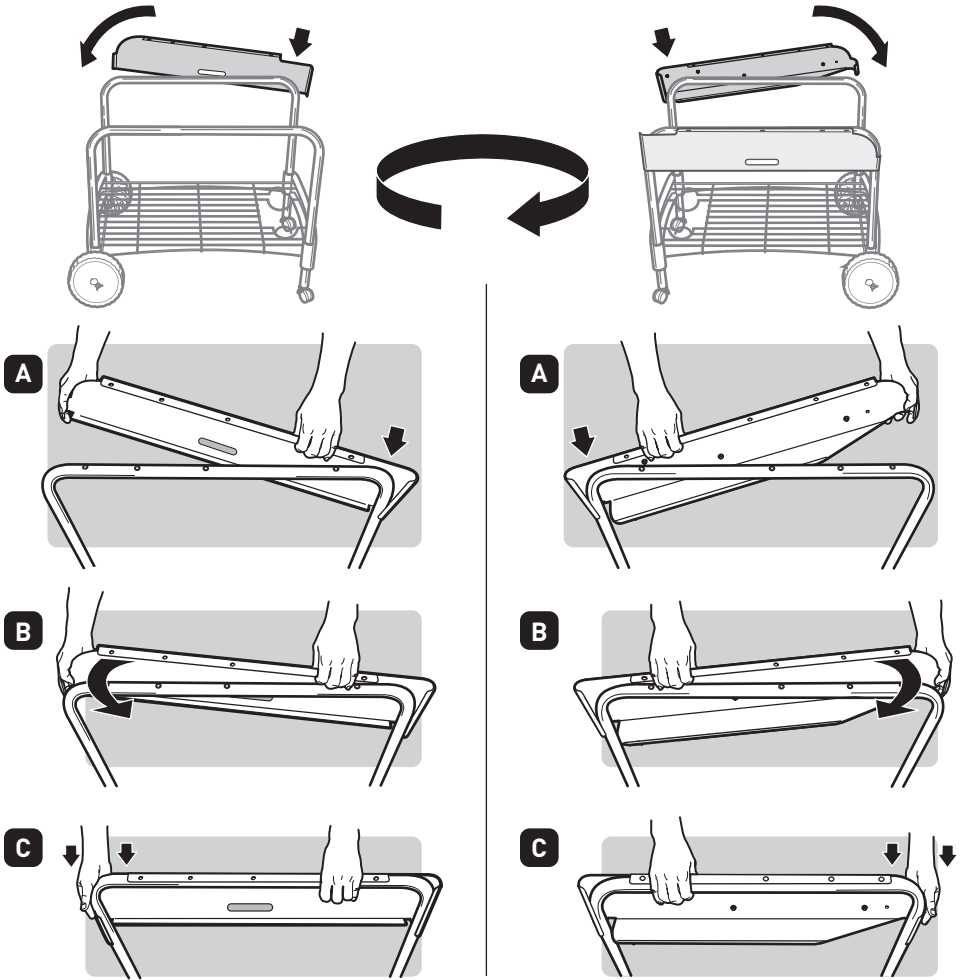

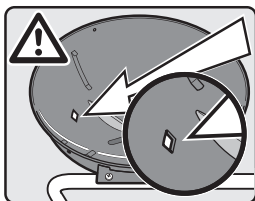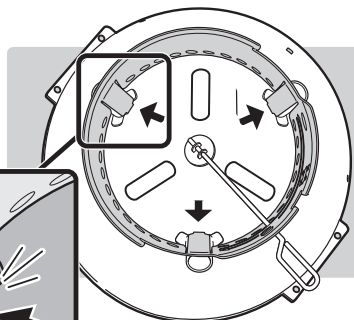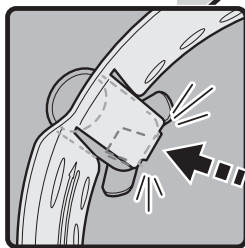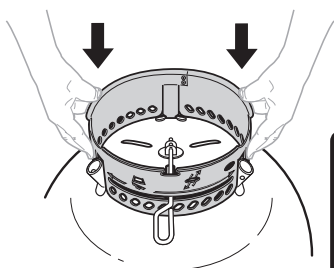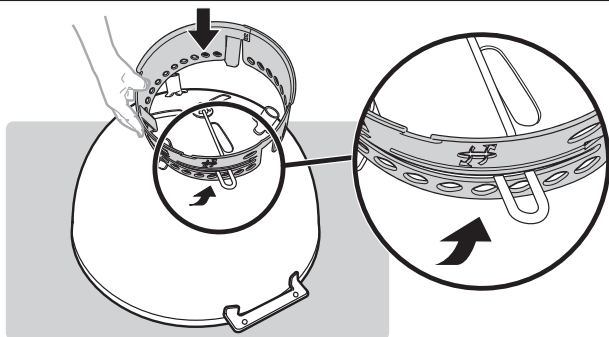


⚠ Finger Tighten Only.

 
Do not fully tighten any of the screws before both the table and bowl assembly have been installed.

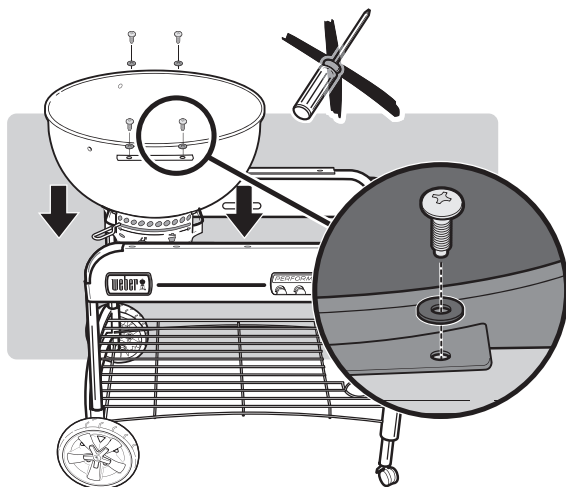

11

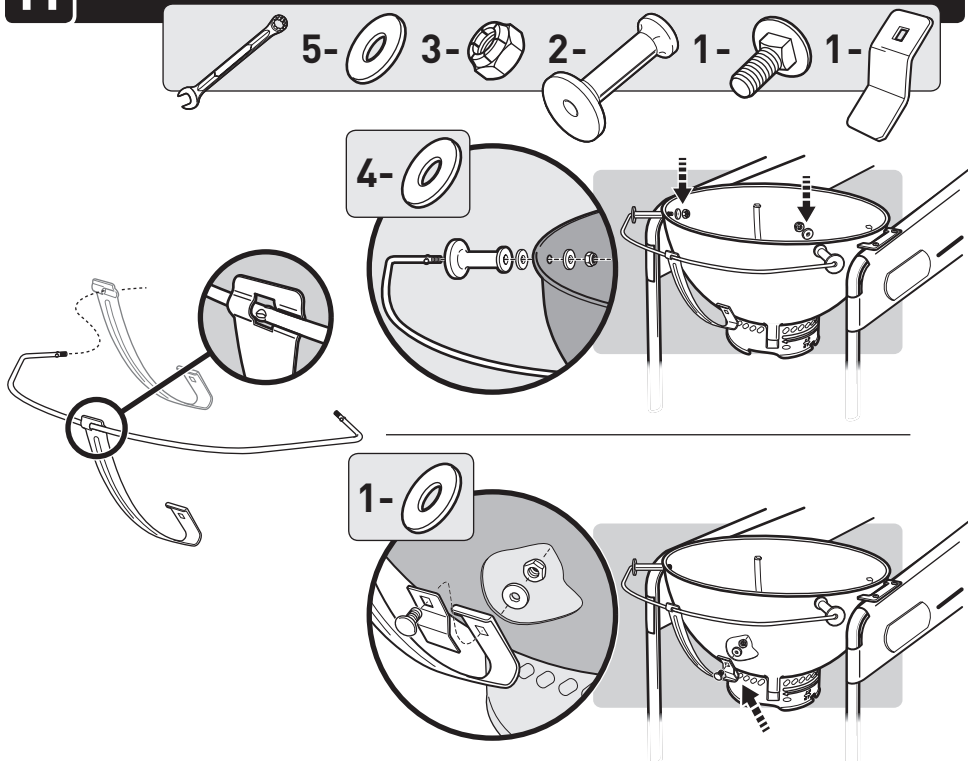 


12

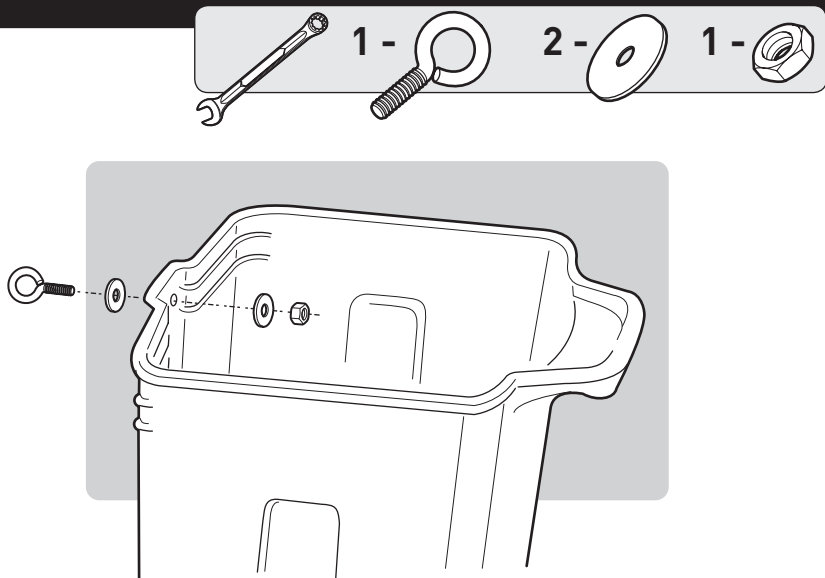 


13

 A

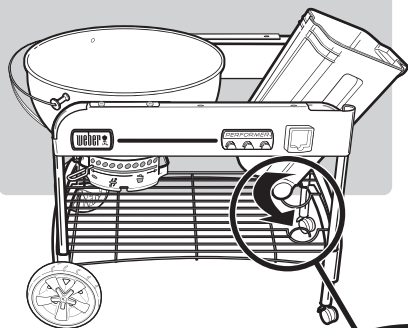


B

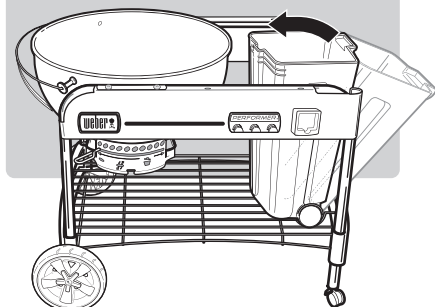 

14

 1 -

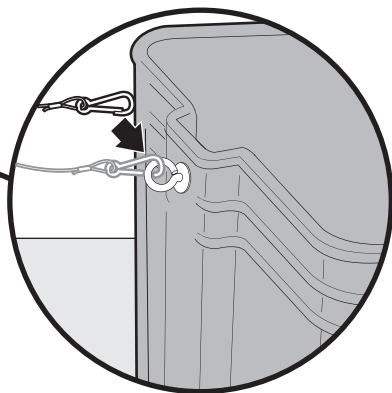


15

4 -



 
A

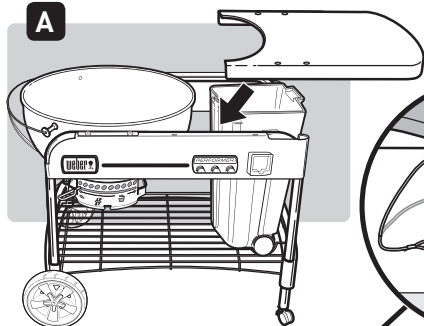


⚠ Finger Tighten Only.



 
B

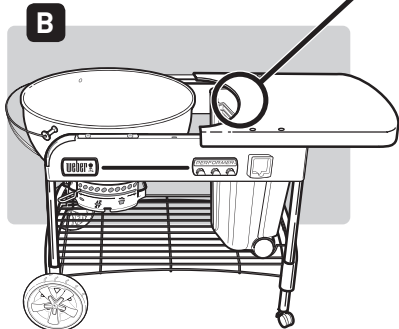


C

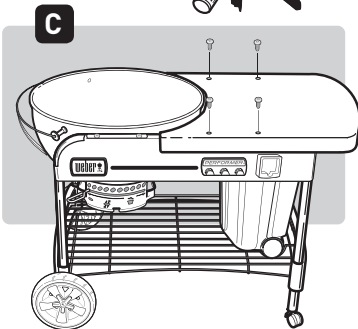 


16


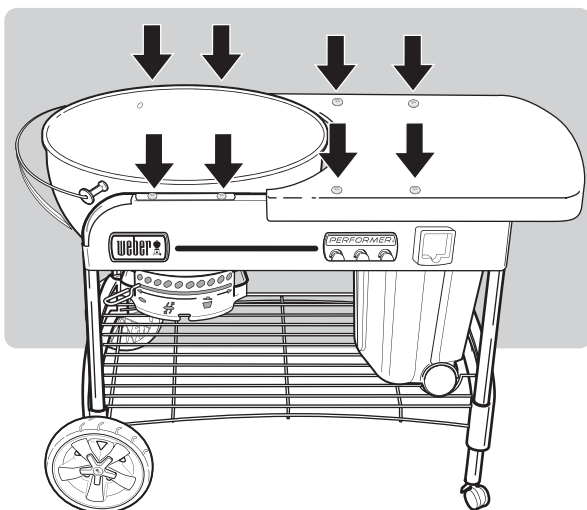 


Fully tighten all eight screws.


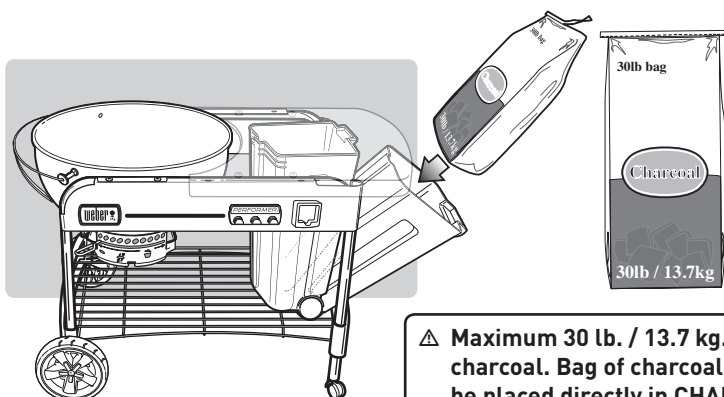 


  
 
⚠ Maximum 30 lb. / 13.7 kg. bag of charcoal. Bag of charcoal should be placed directly in CHARBIN Storage Container.


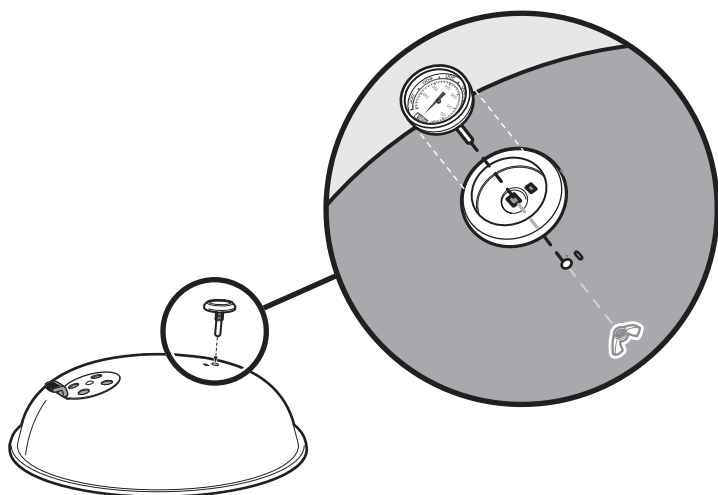


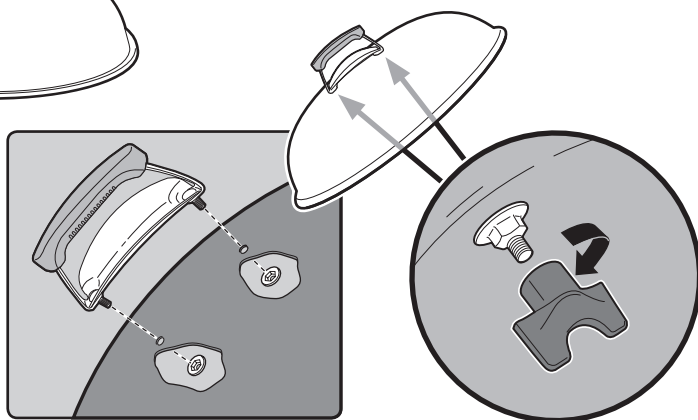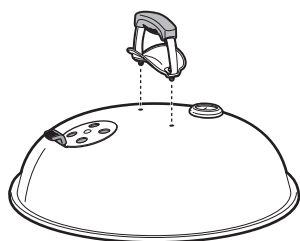

⚠ DO NOT OVER TIGHTEN.

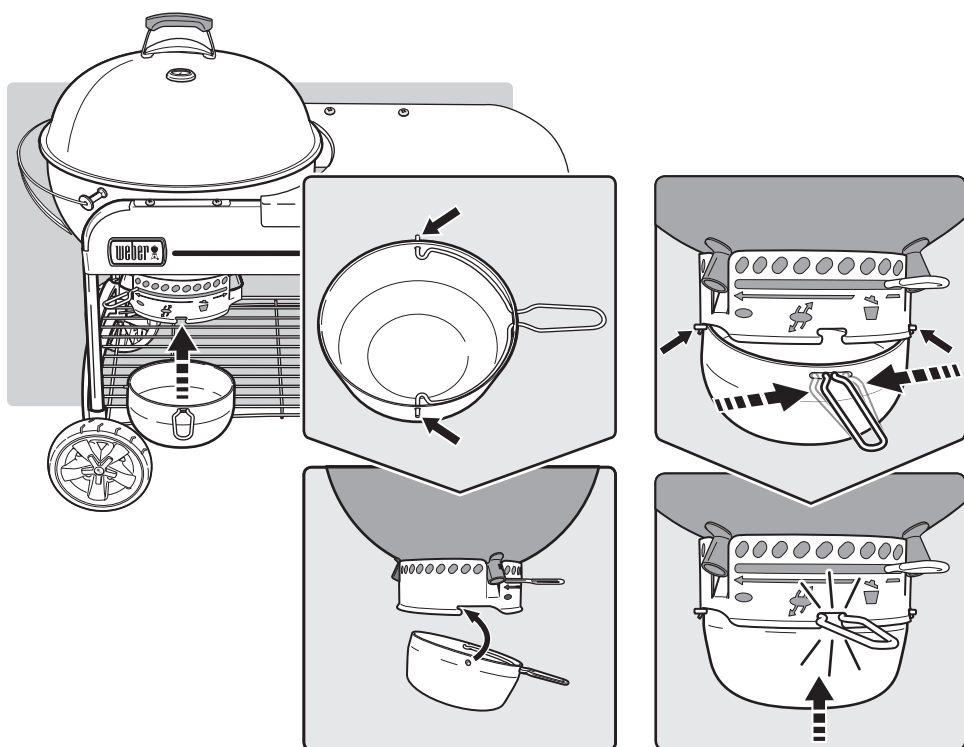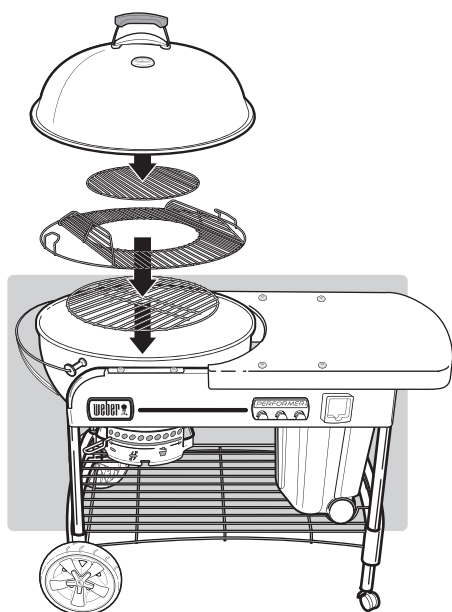  

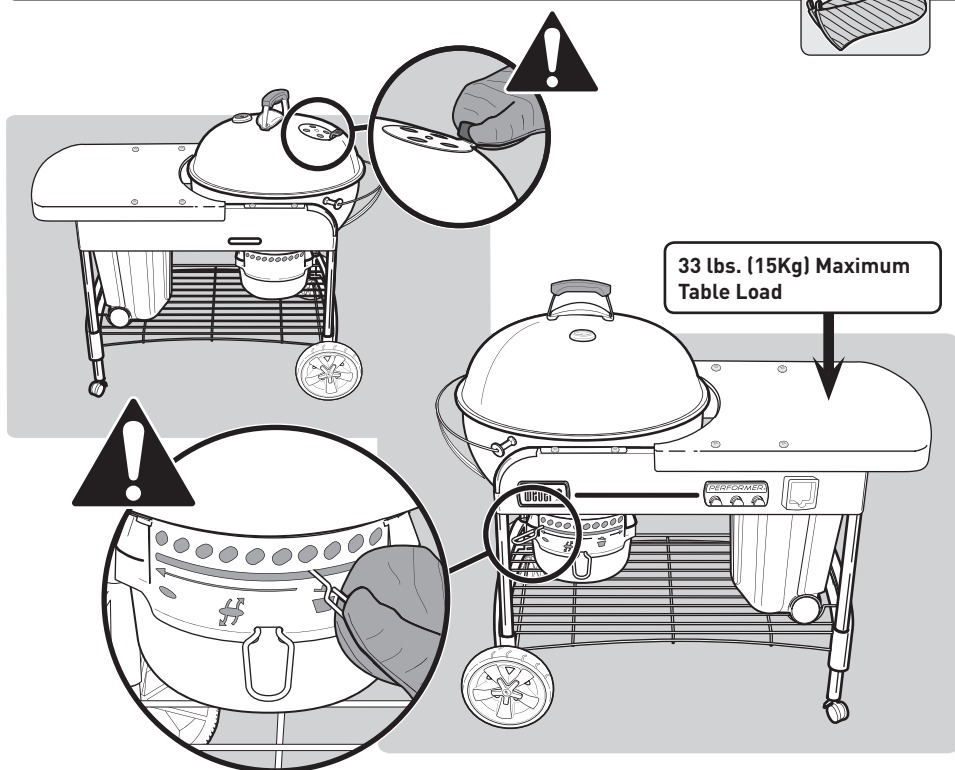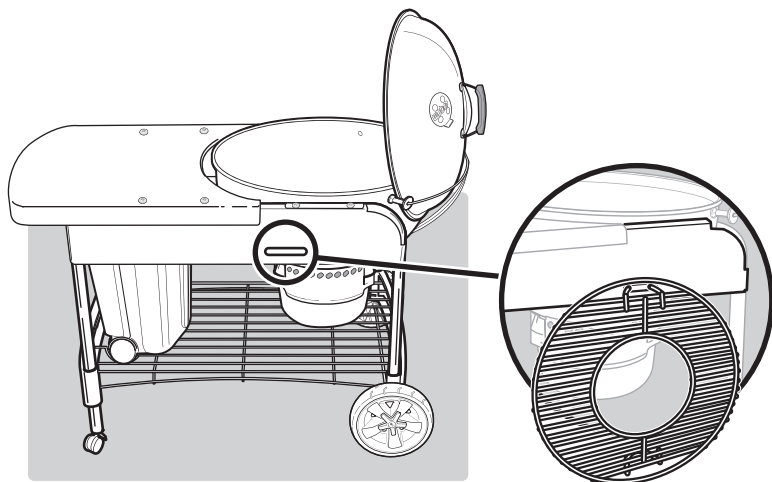  

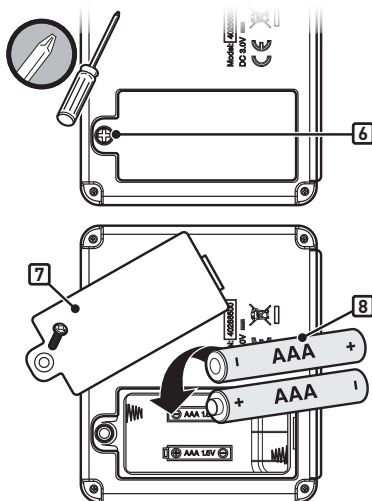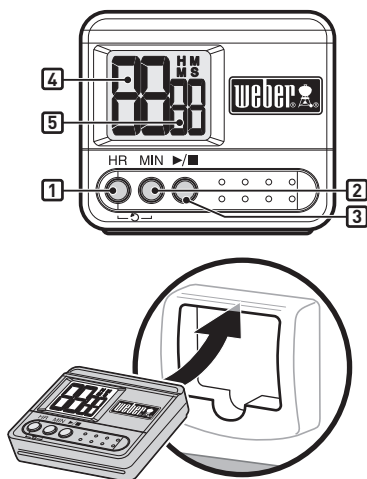  

TIMER OPERATION

This water-resistant digital cook timer provides both countup and countdown features in hours, minutes, and seconds.

To set the time to countdown:

- Press the **Start / Stop: ► / ■** button to turn on the backlight.
- Press the **HR** button (1) to set the number of hours. Hold the button down to fast forward digits (maximum setting: 99 hours) (4).
- Press the **MIN** button (2) to set the number of minutes. Hold the button down to fast forward digits (maximum setting: 59 minutes) (5).
- When the time is set, press the **Start / Stop: ► / ■** button (3) to start the countdown.
- When the time is up, the alarm will sound for 30 seconds and automatically restart countdown from previous time setting.

IMPORTANT

When the timer has over an hour left on the countdown, H and M (Hours and Minutes) will flash on and off; numbers will countdown every minute. When the timer has less than an hour of time left, H and M turn to M and S (Minutes and Seconds) and the seconds countdown; numbers will start to countdown every second.

To clear the time:

- Press the **Start / Stop: ► / ■** button to turn on the backlight.
- Press the **HR** and **MIN: ⌚** buttons simultaneously (1)(2).

To set the time to countup:

- Press the **Start / Stop: ► / ■** button to turn on the backlight.
- Press the **Start / Stop: ► / ■** button again to start countup. While counting up, display will show the reading in hour/minute and minute/second formats.
- Press the **Start / Stop: ► / ■** button twice to stop timer. The countup will stop after 99 hours (4), 59 minutes (5).

Automatic shut off:

- To save battery life, the backlight turns off after 10 seconds. The timer will turn completely off after 10 minutes of inactivity.

Note: If using the timer in an environment that subjects it to electrostatic discharge (static electricity) the time setting may be lost. If this happens, reset the timer.

 
Battery installation:

- Use a Phillips screwdriver to unlock the battery compartment on the back of the timer (6) by turning the screw clockwise.
- Remove the battery cover from the back of the timer (7).
- Add or replace the AAA batteries (8).
- Replace the battery cover.
- Lock the battery cover by turning the screw counterclockwise with a Phillips screwdriver.
- After the batteries are installed, (0000) will display on the LCD screen.

Maintenance:

- Do not clean the timer with an abrasive or corrosive compound. Doing so may scratch it or corrode the electronic circuits.
- Do not subject the timer to excessive force, shock, dust, or expose it to excessive temperatures or humidity. Doing so may result in it malfunctioning, shorter electronic life span, battery damage, or distorted parts.
- Do not tamper with the internal components of the timer. Doing so will invalidate the timer's warranty and may cause unnecessary damage to the battery and internal parts.
- Do not subject the timer to excessive exposure to direct sunlight or heavy rain.
- Do not immerse the timer in water.

For best performance, it is recommended to bring the timer indoors while not in use.

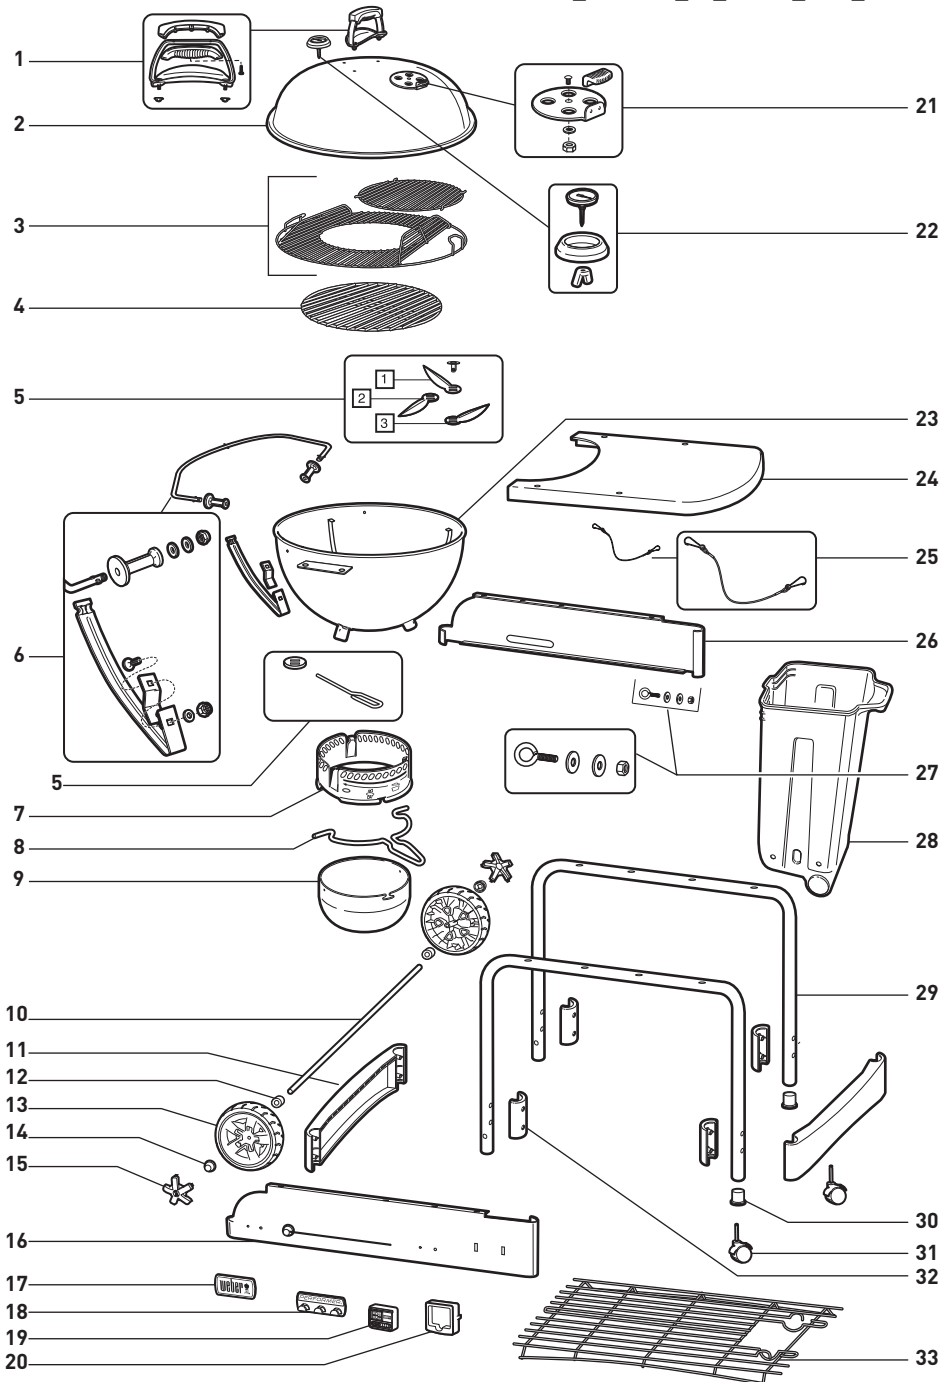







Weber-Stephen Products LLC
www.weber.com